


SALTER®

SINCE 1760

Metallics

Glass Chopper

Practical, stylish design
for everyday use

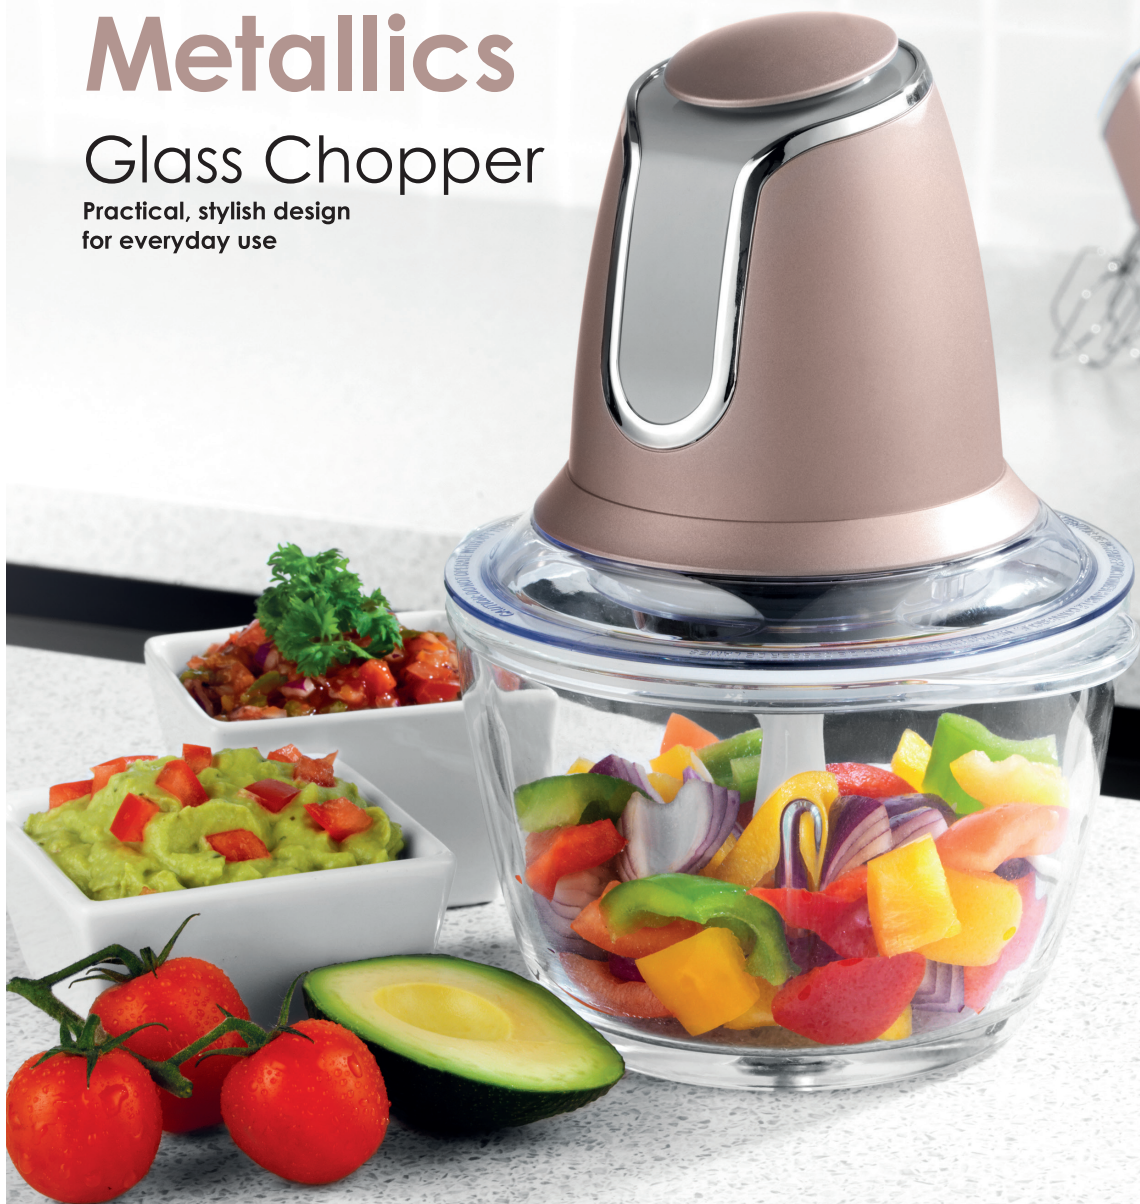

SALTER®

Glass Chopper

Practical, stylish design
for everyday use

Contents	PAGE
Safety Instructions	3–5
Care and Maintenance	5
Getting Started	5
In the Box	5
Features	6
Description of Parts	6
Instructions for Use	6
Before First Use	6
Using the Glass Chopper	7–8
Troubleshooting	8
Storage	8
Specifications	8
Wiring Page	9
Guarantee	10

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances. Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not use broken or loose cutting or rotating blades.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than

that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Do not touch sharp blades.

Care and Maintenance

Before attempting any cleaning or maintenance, switch off and unplug the Glass Chopper from the mains power supply and allow it to cool fully.

STEP 1: Wipe the Glass Chopper main unit with a soft, damp cloth and allow to dry thoroughly.

STEP 2: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the Glass Chopper main unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the Glass Chopper, as this could cause damage.

The Glass Chopper is not safe for dishwasher use.

Note: The Glass Chopper should be cleaned after each use.

Warning: Handle the stainless steel blade with care as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing any attachments.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Glass Chopper

Glass bowl

Plastic lid

Stainless steel twin blade

Non-slip ring

Instruction manual

Features

1.2 L capacity
500 W power
2 speed settings – including turbo mode

Glass bowl
Detachable stainless steel twin blade

Description of Parts



1. Glass Chopper main unit
2. Turbo mode button
3. Glass bowl

4. Plastic lid
5. Stainless steel twin blade

Instructions for Use

Before First Use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly. Wipe the Glass Chopper main unit with a soft, damp cloth and allow to dry thoroughly. Never touch the blades; the stainless steel twin blade should be washed using a brush and dried carefully.

Do not immerse the Glass Chopper main unit in water or any other liquid.

Note: When using the Glass Chopper for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Glass Chopper.

Using the Glass Chopper

All attachments must be securely fitted before use; do not attempt to remove them until the blades have stopped moving.

STEP 1: Position the non-slip ring on a flat, stable surface at a height that is comfortable for the user.

STEP 2: Place the glass bowl onto the non-slip ring. Make sure that the glass bowl is centred and the edges of the non-slip ring are not bent.

STEP 3: Carefully insert the stainless steel twin blade into the glass bowl and guide the twin blade with the stainless steel pin. Rotate the blade slightly so that it is fully in position.

STEP 4: Place the food that is to be chopped into the glass bowl. The Glass Chopper is designed to process small amounts of dry food at one time. Larger amounts should be processed in several smaller batches to avoid overfilling the glass bowl.

STEP 5: Place the plastic lid onto the glass bowl and secure into place. For safety reasons, the appliance will not operate if the glass bowl and plastic lid are not securely locked into place.

STEP 6: Place the main unit onto the plastic lid and secure by aligning the tabs on the stainless steel twin blade with the slots on the main unit. Twist it in a clockwise direction until it drops into position.

STEP 7: Plug in and switch on the Glass Chopper at the mains power supply.

STEP 8: Gently push down the main unit to begin chopping. To increase the speed, press and hold the turbo button on the top of the main unit.

STEP 9: Additional food may be added to the chopped ingredients by removing the main unit and plastic lid and adding the ingredients. Replace the plastic lid before repeating the chopping process.

STEP 10: To detach the glass bowl, unplug and remove the main unit and take off the plastic lid. Carefully remove the stainless steel twin blade without touching the blade itself.

Note: For optimum performance, solid food should be cut into smaller batches before chopping. Avoid including any fruit stones, bones etc.

Caution: Switch off and unplug the Glass Chopper from the mains power supply before adding or removing food from the glass bowl.

Warning: Do not operate the Glass Chopper without food as this can cause damage.

Switch off and unplug the Glass Chopper from the mains power supply before attempting to remove the stainless steel twin blade before cleaning.

Maximum operation time is 1½ minutes. Allow to cool for 1 minute before using the Glass Chopper again.

Troubleshooting

Problem	Possible Cause	Solution
The Glass Chopper will not operate.	The Glass Chopper is not connected to the mains power supply.	Plug in and switch on the Glass Chopper at the mains power supply.
	The Glass Chopper is not correctly assembled.	Check that the Glass Chopper has been properly assembled and that the glass bowl and lid are secured into place.
Dry ingredients are clumping together.	The glass bowl is wet.	Dry the glass bowl thoroughly before adding ingredients.
There are large unchopped chunks of ingredients after chopping.	The glass bowl has been overfilled.	Remove some of the ingredients and chop in batches.

Storage

Check that the Glass Chopper is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the Glass Chopper; wrap it loosely to avoid causing damage.

Specifications

Product code: EK3264CHAMPAGNE

Input: 220–240 V ~ 50/60 Hz

Output: 500 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ($\perp$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

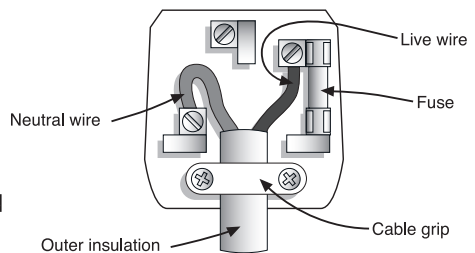

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



3
YEAR

GUARANTEE*

*To be eligible for the extended guarantee,
go to www.saltercookshop.com
and register your product within
30 days of purchase.



Find us on 

www.facebook.com/SalterCookshop



Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.



SALTER®

CD210119/MD000000/V1